



# DT412/DT422

Cordless Telephones for Ericsson MX-ONE™  
Telephony Switch and Ericsson MD110

## Quick Reference Guide

This Quick Reference Guide includes short descriptions on how to use the basic features. To learn more about all available functions and features, please see the related User Guide.

### Switching On/Off

Switch on: (Until display on) **Yes** (Within 2 seconds)

Switch off: *Press and hold programmed Hot key*

### Free Seating<sup>1</sup>

Log on: **\*11\*** Authorization code **\***  
Own ext. No. **#**

Log off: **#11#**

### Answer Calls

Answer:

Handsfree: *Press middle soft key*

On another ext.  
(Call pick-up): *Call ringing ext.* **8**  
*France: 4; Sweden: 6*

End call:

### Make Calls

On hook: *Ext. No. or External line code and No.*

Off hook: *Ext. No. or External line code and No*

Handsfree: *Dial No. and press middle soft key*

Common Speed  
Dialing number: *Dial Speed Dialing No.*

Dial a number via  
Hot/Soft key: *Press and hold preprogrammed Hot key  
or Press preprogrammed Soft key*

Make a call via the  
phone book: **Find** Enter first letter of name **Ok**  
 or (Until name is displayed)

Dial number from  
the call list: (Until number is displayed)

Last External  
Number Redial: **\* \* \*** *Finland, Sweden: \* \* 0*

The complete User Guide is available in electronic format on the Enterprise Telephone Toolbox CD and on <http://www.ericsson.com/enterprise/library/manuals.shtml>

### Inquiry

Ongoing  
conversation: **R** (See display) *Call 3rd party*

Refer back: **2**

Return and  
finish Inquiry: **R** (See display)

### Transfer

Ongoing  
conversation: **R** (See display) *Call 3rd party*  
 (Before or after answer)

### Conference

Ongoing  
conversation: **R** (See display) *Call 3rd party*  
**3** (After answer)

### Callback

Activate: **6**   
*Finland, France, Sweden: 5*

Cancel single  
Callback: **#37\*** Ext. No. **#**

Cancel all  
Callbacks: **#37#**

### Call Waiting

Activate: **5** (At busy tone) *Wait on line*  
*Finland and France: 6; Sweden: 4*


### Handsfree

Activate or  
Deactivate: *Press middle soft key*


### General Deactivation

Cancel all activated  
features: **#001#**

### Menu structure

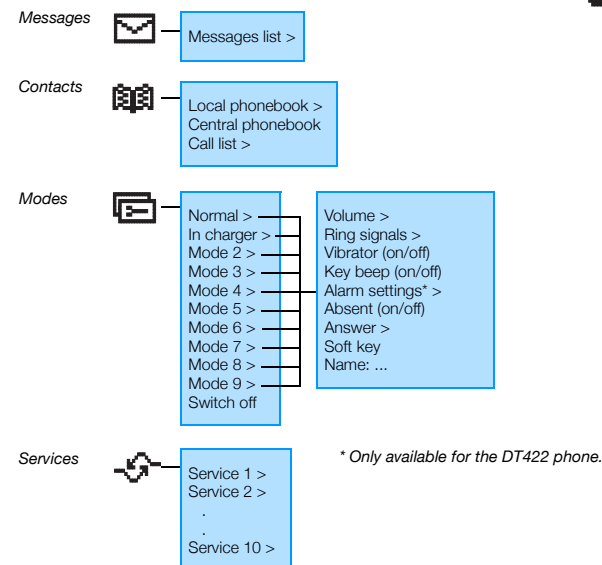

### Settings

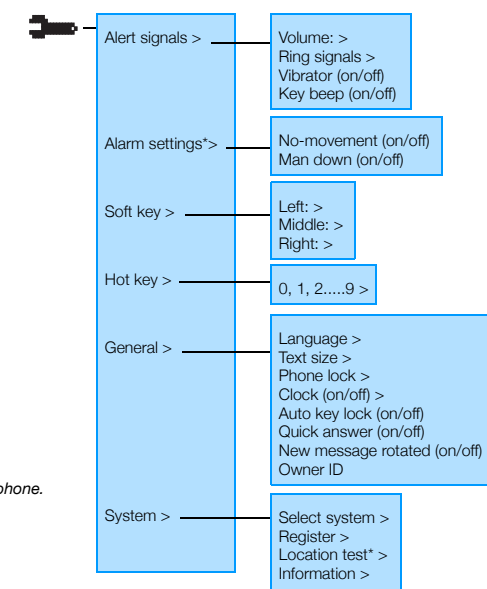

### On hold

Put a call on hold: **R** (See display)

Resume call: (Within 30 seconds)

Resume on  
another extension: *Call ext. where call was put on hold*  
 **8**  
*France: 4; Sweden: 6*

### Internal Follow-me

Order from your  
own extension: **\*21\*** New ext. No. **#**   
*U.K.: \*2\**

Cancel: **#21#**   
*U.K.: #2#*

### External Follow-me

Order: **\*22#** External line code and No.  
**#**

Cancel: **#22#**

### Personal Number<sup>1</sup>

Activate or  
change profile from  
own extension: **\*10\*** (1-5) **#**

Cancel: **#10#**

### Voice Mail<sup>1</sup>

Enter your mailbox: *Dial voice mail No. and follow recorded instructions*

New message  
received: **Listen** *Follow recorded instructions*

### Program a Hot/Soft key with a number

Program: or (Settings)  
 (Soft key or Hot key)   
 or (Select key) Edit  
Enter name Save Change  
 (Phone call) Select Enter No. Save

### Absence Information<sup>1</sup>

Order: **\*23\*** Absence code

With return  
date/time: **\* Date/Time #**   
(Date sequence is system dependent)

Without return  
date/time: **#**

Cancel: **#23#**

### Abbreviations and Explanations

ext.	Extension	Yes, Find, Ok, Listen, Edit,
No.	Number	Save, Change, Select Soft key
1	Optional	